

TROUBLE SHOOTING

If the unit doesn't operate...	Check that the batteries are installed correctly. or Install new batteries.
If the volume is too low...	Install new batteries.
If the voice/music begins playing at a very high or low rate of speed...	Install new batteries.
If there is a continuous buzzing sound and the unit doesn't operate...	Install new batteries.
If the light of the keys becomes dim...	Install new batteries.
If the unit malfunctions...	Install new batteries.

IMPORTANT INFORMATION

// Care instructions: //

- Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Do not expose the unit to moisture or water.

This product complies with the essential requirements of the European Toy safety directive.

// Warranty: //

Should you in the unlikely event experience any problems with this product all our products have a six month guarantee. In the first instance, return the product back to the place of purchase where a replacement will be issued.

InspirationWorks UK Ltd

Charlotte Court
Proctor Way
LUTON
Bedfordshire
LU2 9PE
UK



www.inspirationworks.co.uk

www.firemansamonline.com

© 2011 CIDE Toys - www.cidetoys.com

© 2012 Prism Art & Design Limited. The Fireman Sam name and character are trademarks of Prism Art & Design Limited.

© HIT Entertainment Limited. HIT and the HIT logo are trademarks of HIT Entertainment Limited.

V00
March 2012
Printed in China
Made in China



WASTE ELECTRICAL PRODUCTS AND BATTERIES
SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD
WASTE. PLEASE RECYCLE WHERE FACILITIES
EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR
RECYCLING ADVICE



AGE 2+


FIREMAN SAM'S INTERACTIVE BOOK

// Instruction manual //

CONTENTS

- Fireman Sam's Interactive Book
- User Manual

Game selector

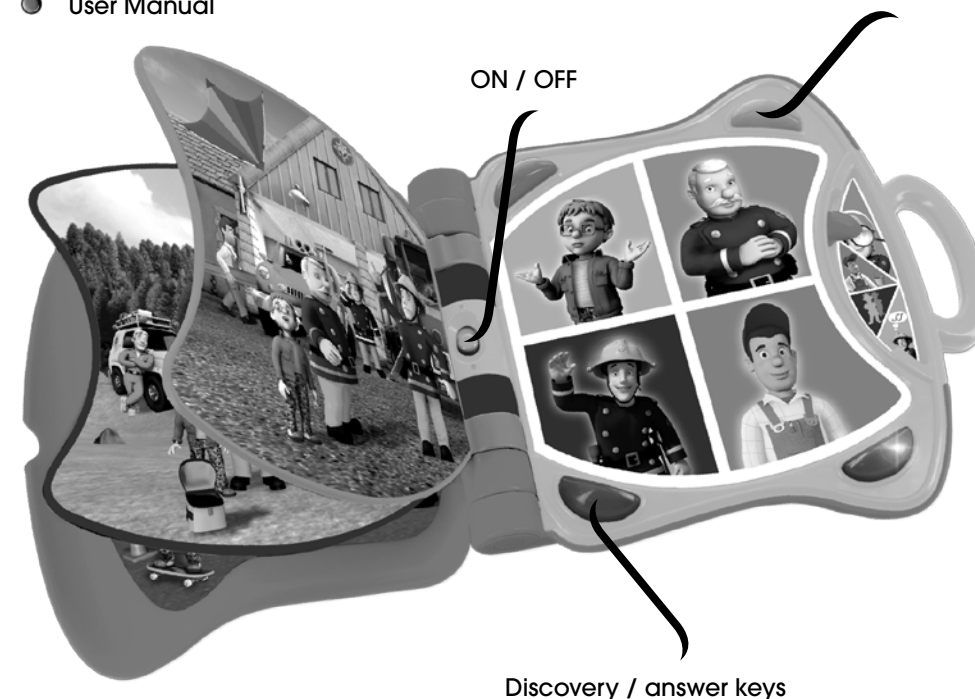

ON / OFF

Discovery / answer keys

// Important information: //

- This toy is suitable for children aged 2 years & over.
- Please retain this manual for further reference.
- WARNING: All packing materials such as internal bags, plastic collars, plastic films, carton inserts are not part of this product and should be discarded for your child's safety.
- IMPORTANT: for additional safety, check toys regularly for signs of damage during use.



S1083

HOW TO PLAY

- Open the Interactive Book.
- Turn the pages to choose a scene.
- Use the game selector to choose a game.
- Turn the unit ON to begin!
- Listen to Fireman Sam's instructions and questions and press the Discovery/Answer keys to learn about characters, answer questions and hear fun sounds!

// The Scenes: //



// The Games: //

Game 1: Discovery

Fireman Sam would like to introduce you to his friends!

Press on the Discovery/Answer keys to learn the characters names and hear them say a short phrase.

Game 2: Who is this?

Fireman Sam wants to see how much you know about his friends!

Sam will ask you to find one of his friends either by naming them, or by playing a short phrase that they say.

You have three chances to find the correct character, before Sam will tell you the answer and the correct Discovery/Answer key will flash.

Game 3: Look at the scene!

Fireman Sam wants to see how closely you are looking at the scene!

Sam will ask you to find one of his friends by asking you a question about the scene. It could be something that one of his friends is wearing or where they are in the scene.

For example, he may ask you "Who is wearing a yellow helmet?" or "Who is standing next to Jupiter?"


You have three chances to find the correct character, before Sam will tell you the answer and the correct Discovery/Answer key will flash.

Game 4: Fun Phrases!

Press on the Discovery/Answer keys to hear each of the different characters say a short phrase!

HOW TO CHANGE BATTERIES

1. This product requires 2 x 1.5V-AA-LR6-AM3 batteries.
2. When required, using a suitable screwdriver, undo and remove the battery cover located under the unit.
3. Insert 2 x 1.5V-AA-LR6-AM3 batteries into the compartment ensuring they are installed the correct way around.
4. The polarities are marked inside the battery compartment.
5. Should the batteries have no polarity markings, the flat end of the battery should always be inserted against the spring.
6. Do not over tighten.

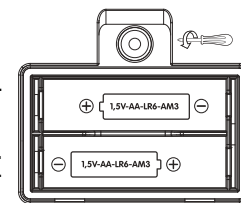

// Please note the important points below when using batteries to power this product: //

- Batteries should be inserted and removed by an adult.
- Only use the type of batteries specified in this user manual, or equivalent type. We recommend the use of alkaline batteries.
- Follow the polarity diagram inside the battery compartment and the polarity markings on the batteries.
- An incorrect location may either damage the toy, or cause battery leakage, or, to an extreme degree, lead to battery explosion.
- Do not try to charge non-rechargeable batteries, as they may leak or explode.
- Replace all batteries at the same time.
- Do not mix new with old batteries.
- Do not mix different types of batteries (i. e. alkaline and zinc carbon).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product.
- Do not short-circuit the supply terminals. Store batteries away from metal objects.
- Do not dispose of batteries in fire, as they may leak or explode. Never disassemble batteries.
- Rechargeable batteries should not be used.
- When rechargeable batteries are used anyway :
 - Rechargeable batteries shall be charged only under the supervision of an adult.
 - Rechargeable batteries shall be removed from the toy before being charged (if they can be removed).
- If a battery is swallowed, consult a Doctor or Medical Facility. Don't forget to take the product with you.
- If battery leakage occurs and comes in contact with the skin or eyes, wash immediately with lots of water.
- Batteries are included for demonstration purposes only and may need replacing after purchase.
- Strong Electro Magnetic Interference may disturb the normal function of the product. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function does not resume, please use the product in another location.